


Owner's Manual

Integrated Stereo
Amplifier

RA-212

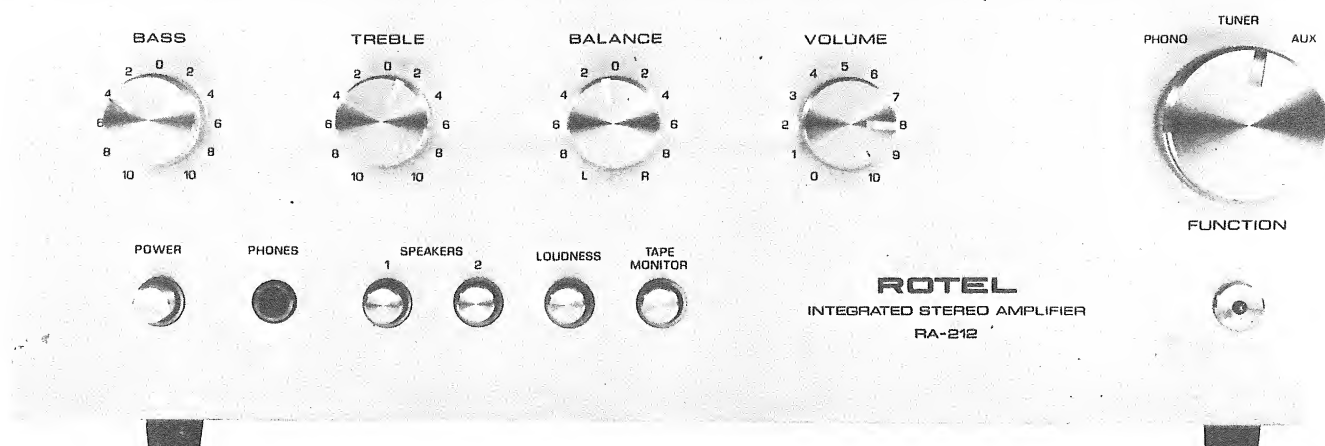

ROTEL®

INTRODUCTION

We would like to take this opportunity to thank you for purchasing our Stereo Amplifier. With the high quality design and workmanship that goes into making this equipment, you can be assured of its flawless performance for many years to come.


We have fitted every control and feature you could conceivably need. Designed for both versatility and ease of operation, this piece of equipment will add professional studio flexibility to your Hi-Fi sound center. The per-

formance is exceptional; it will allow you to experience true high fidelity as never before. Its full and natural stereophonic reproduction offers you musical entertainment approaching that of live performances. We sincerely hope you will treasure this professional equipment. In order to obtain the maximum use out of your unit, please read the following pages of this Operating Manual carefully.

Do not attempt to operate the unit until you have made all the necessary connections.

WARNING—to prevent shock or fire hazard, do not expose this appliance to rain or moisture.

FRONT PANEL CONTROLS

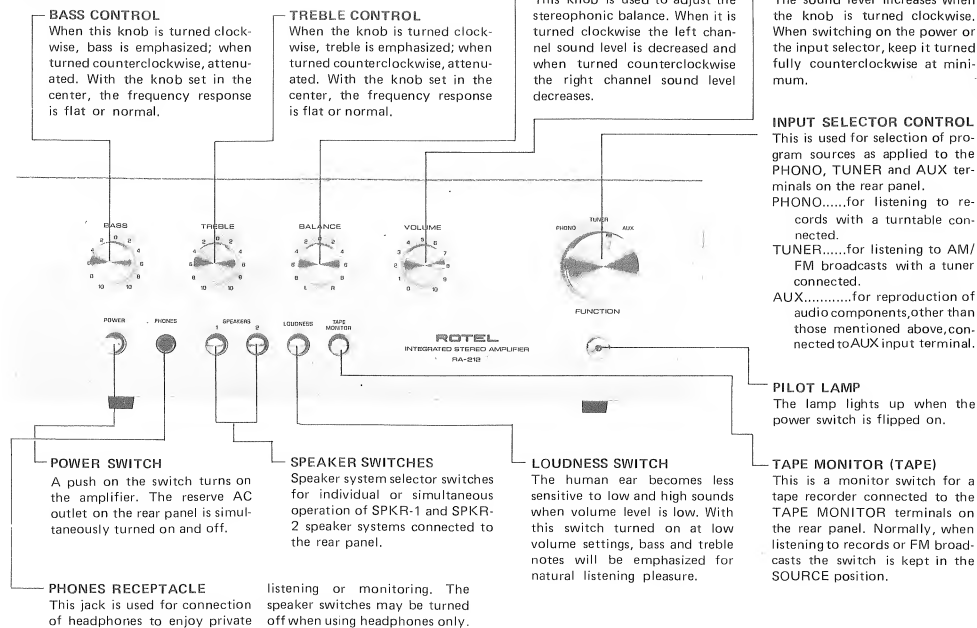

INSTALLATION

IMPORTANT: Do not turn on the power switch before completion of proper connections of the speaker systems and inputs.

SPEAKER SYSTEMS

This unit is equipped with quick-connect jaw-snap terminals for connecting two sets of speakers. Connect your main pair of speakers to the terminals marked SPKR-1. Ensure that your right speaker is connected to the terminal marked ⊕ and that the ground (−) terminal on the right speaker is connected to the terminal marked ⊖ on the extreme left of the terminal block. Similarly, connect your left speaker between the adjacent SPKR-1 terminals marked ⊕ and ⊖. If you wish to connect a second pair of speakers, connect them to SPKR-2 terminals in the manner described above.

Caution: Ensure that the speaker leads are fastened securely to the proper terminals, and that there are no stray strands which may cause shorting between terminals. If 2 sets of speakers are palyed simultaneously, the impedance of each unit should not be less than 8 ohms.

TURNTABLE

Model RA-212 is provided with one pair of PHONO terminals for connection and playback of one turntable. Connect RIGHT output pin jack of turntable to the RIGHT of the PHONO terminals, and LEFT pin jack to the LEFT of the PHONO terminals. The output cord from turntable to be connected to the PHONO terminals should be as short as possible in order to minimize loss of high frequency characteristics. When using a

turntable equipped with a ground wire, connect the ground wire to the GND terminal of this unit. If your turntable comes with a DIN plug, simply plug it to the DIN socket PHONO. If you wish to use a ceramic cartridge, move the MAG/CER selector switch down to CER position. If the cartridge is magnetic, leave it at MAG position.

AM/FM TUNER

For a stereo tuner, the RIGHT and LEFT outputs on the rear panel of the tuner should be connected to the TUNER terminals on the rear panel of this unit. Connect the RIGHT output cord from the tuner to TUNER terminal RIGHT of this unit, the LEFT output cord to TUNER terminal LEFT.

CONNECTION TO THE AUX TERMINALS

Output of various types of audio equipment can be connected to the terminals, such as 8 track tape player.

TAPE RECORDER

The TAPE MONITOR terminals on the rear panel of this unit are for connection of tape recorder input and output.

IN (tape playback input).....for connection of tape recorder output when playing back pre-recorded tape through this unit.

OUT (tape recording output).... for connection to the input of a tape recorder for recording programs from record player or tuner connected to this unit.

CONNECTION TO THE GROUND (GND) TERMINAL

When the outputs of a recorder player and a tape recorder are connected to this unit for playback, any ground wire from the respective equipment should be connected to the ground terminal of this unit provided on the rear panel in order to prevent hum and other noises.

CONNECTION TO THE AC OUTLET

Power supply to a record player or a tuner can be obtained from this outlet provided on the rear panel of this unit. The outlet is turned on and off with the operation of the power switch on the front panel. Any equipment connected to the outlet should not exceed the indicated power consumption rating of 150W.

OPERATION

After all the connections have been made, turn on the power switch.


TURNTABLE

1) Connect the turntable output to the PHONO terminals on the rear panel of this unit.

2) Set the input selector switch on the front panel to the PHONO position.

3) Make sure that the tape monitor switch is in the SOURCE position.

4) Turn the other control knobs to obtain the sound level desired.

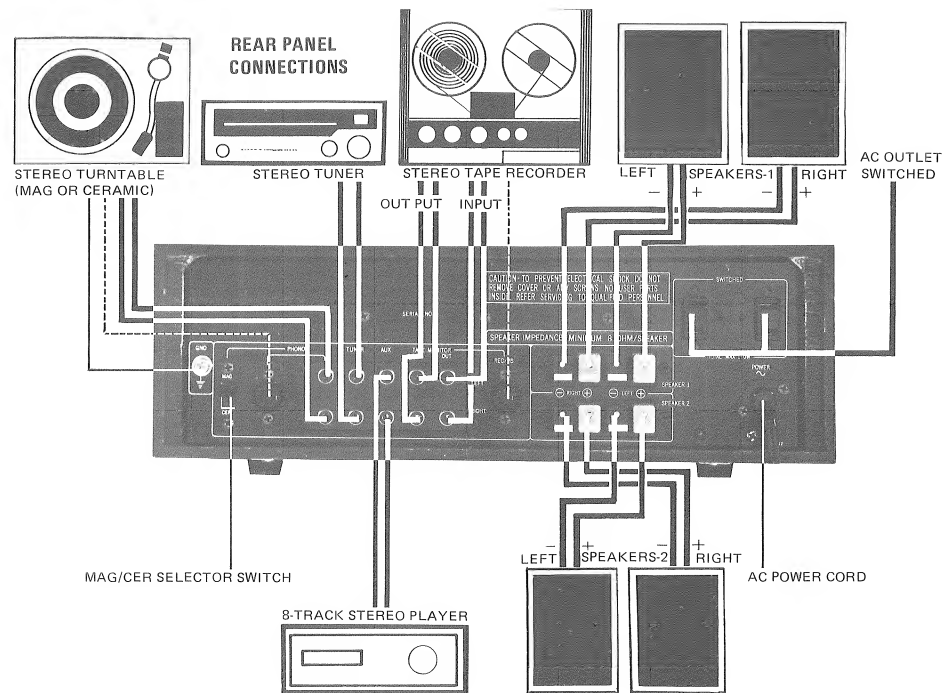

AM/FM TUNER

- 1) Connect the tuner output to the TUNER terminals on the rear panel of this unit.
- 2) Set the input selector switch on the front panel to the TUNER position.
- 3) Make sure that the tape monitor switch is in the SOURCE position.
- 4) Turn the other control knobs to obtain the desired level after the tuner has been tuned in to the desired station.

TAPE RECORDER

Connect the tape recorder input and output to the TAPE MONITOR terminals on the rear panel of this unit.

RECORDING

- 1) Make sure that the tape monitor switch on the front panel is set in the SOURCE position.
- 2) Set the input selector switch to one of the program source positions, PHONO, TUNER or AUX.
- 3) Perform recording operation of the tape recorder to record the desired program source through this unit.

PLAYBACK

- 1) Press the tape monitor switch and set it in the MONITOR position. (In the case of playback, the input selector switch can be kept in any position as it is overridden at this operation.)
- 2) Perform a playback operation of the tape recorder and control the other controls on this unit to enjoy tape playback at the desired sound level.

STEREO HEADPHONES

Just insert to the PHONES jack to enjoy private listening.

TOE CONTROLS

BASS.....for control of bass notes.

TREBLE.....for control of treble notes.

Even when the tone controls are set in the center position, it is not always possible to obtain an acoustically flat response depending on program sources and acoustic characteristics of the listening room. The tone controls enable the listener to have an acoustically flat response. However, an excessive boost of bass or treble notes may produce unpleasant results, so the tone controls should be used only to compensate for acoustic requirements.

rated at 8 ohms.

If used at below 4 ohms, this unit may burn out or give rise to mal-functioning of this unit when used continuously for considerable time. Also, do not use speakers rated below 8 ohms, when playing two pair of speaker systems simultaneously.

HUM AND NOISE

In any high fidelity installation, hum may be caused by the interconnection of a record player, tuner and amplifier, as a result of the cables and different grounds. If hum is experienced with your amplifier, disconnect everything but the speakers from the unit. If hum persists, reverse the AC line cord. Plug in the record player and if hum appears, reverse the record player power plug and connect a single lead from the record player chassis to the ground post on the rear chassis. Connect your other devices in this manner.

Caution: Hum may also be induced by defective connecting cables or by running these cables too close to a strong AC field.

INSTRUCTION FOR OPERATION

LOCATION OF OPERATION

Model RA-212 is designed with due considerations for heat radiation. However, it should not be installed in an airtight cabinet or exposed near heat sources.

CONNECTION OF SPEAKERS

The RA-212 amplifier is specified at the load impedance of 4—16 ohms. Most speakers are

SPECIFICATIONS

Continuous Power Output	10 watts per channel, min. RMS, both channels driven into 8 ohms from 50 to 20,000 Hz with no more than 1 % total harmonic distortion
IM Distortion	not more than 0.2 % at rated output, ± 1 dB
Frequency Response	15 to 50,000 Hz, ± 3 dB at 1 watt per channel
Damping Factor	40 at 1 KHz
Signal to Noise Ratio	(IHF, 'A' network closed circuit)
PHONO	more than 65 dB
TAPE, AUX, TUNER	more than 80 dB
Residual	less than 1 mV
Input Sensitivity/Impedance (at rated output, 1 KHz)	
PHONO (magnetic)	2.8 mV/47 kohms
PHONO (ceramic)	150 mV/100 kohms
TUNER	150 mV/50 kohms
AUX, TAPE	150 mV/50 kohms
Output Level (TAPE OUT)	350 mV/3.3 kohms (5 mV input)
Phono Overload	more than 90 mV
Phono Equalization	R.I.A.A. STD ± 1.5 dB
Crosstalk	50 dB (overall at 10 KHz)
Bass Control	± 10 dB at 100 Hz
Treble Control	± 10 dB at 10 KHz
Loudness	+ 7 dB/100 Hz, +3 dB/10 kHz
GENERAL:	
Power Consumption	100 watts
Dimensions	335 (W) x 240 (D) x 115 (H) mm
Weight	4 kg/8.8 lbs

Note: features and specifications subject to changes for improvement without notice.

EXCLUSIVE NOTE FOR U.K.

If your unit comes with a 3-core cable without a plug, make certain live, neutral and (where appropriate) earth leads are connected to the proper terminals. Check that the terminals are screwed down firmly and no loose strands of wire are present.

WARNING: THIS APPARATUS MUST BE EARTHED

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:

GREEN/YELLOW:	EARTH
BLUE:	NEUTRAL
BROWN:	LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows.

The wire which is coloured GREEN/YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol \perp , or coloured GREEN or GREEN/YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLUE or BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured BROWN or RED. The apparatus must be protected by a 3 Amp fuse if a 13 Amp (BS 1363) plug is used. If another type of plug is used a 5 Amp fuse or lower must be used, either in the plug or adapter or at the distribution board.

Quality. Uncompromised.

ROTEL®

510015